

FOR INFORMATION ONLY

Secondary menu (Automatic control lock - Showroom - ECO-logic)

The hob is equipped with a secondary menu for activating or deactivating some parameters:

- 1 **Automatic control lock:** on activating this mode, one minute after the last operation by the user, the controls will automatically be locked (see 5.8 Control lock).
- 2 **Showroom:** on activating this mode, the appliance deactivates all the heating elements, while keeping the control panel active (useful for demonstration purposes in store). To use the hob normally, set this mode to "n".
- 3 **ECO-logic** (on some models only): on activating this mode, the hob electronics will automatically adjust the power levels to stay within the set maximum power absorbed: 2; 3 or 4 kW. To use the hob at maximum power, set this mode to "n".



5.10.1 Changing the settings in the secondary menu

While all of the cooking zones are off, hold down key relating to the front left-hand plate for at least 5 seconds.

The cooking zone display will show the number of the setting currently being modified (1: automatic control lock, 2: showroom, 3: ECO-logic) with its setting at the side (S: active ; n: inactive). For example 1n indicates that the automatic control lock is inactive.

Use keys + and - to change the setting to "n" or to "S"; if changing the ECO-logic parameter the following may be selected 2 (2 kW), 3 (3 kW), 4 (4 kW) and n (maximum power absorbed). To advance and change the subsequent settings, press key ⚡.



The secondary menu has to be managed independently for each zone on the hob equipped with three hot plates in line. Repeat the setting operations for the left cooking zone (Single hot plate) and the right cooking zone (Double hot plate).