

GB

Instructions for use



Upright freezer



Thank you for your confidence in buying our appliance and congratulations on the excellent choice. We hope it will successfully serve its purpose for many years.

Upright freezer is used in households for freezing fresh food and storage of frozen food for up to one year (depending on the type of food).

Before first operation	3
Description of the appliance	5
Installation and connection	7
Reverse door swing	9
Control panel	10
Freezing and storage of frozen food	13
Defrosting the appliance.....	16
Cleaning	17
Troubleshooting guide.....	18
Noise level	20

Before first operation



- Before connecting the appliance read these instructions carefully. They describe the appliance and provide instructions for its safe and correct use. The instructions are prepared for different types and models of the appliance so they may contain descriptions of functions and components your appliance may not have. Instructions also contain the NO FROST freezer version, with integrated fan and automatic defrost.
- Remove the wrapping protecting the appliance during transport. Door corners are fitted with protective spacers. Remove the spacers and replace them with the attached pegs.
- Before connecting the appliance to the mains supply, leave it in upright position for about 2 hours. This will reduce possibility of malfunctions in the cooling system resulting from prior transport and handling.
- The appliance must be connected to the mains supply in accordance with the standing regulations and local requirements.
- The appliance must not be used in open air or exposed to weather precipitation.
- Always disconnect the appliance from power supply (pull the power cord from wall socket) before cleaning and before replacing the light bulb.
- If the power supply cord is damaged, in order to avoid hazard it must be replaced by the service or by qualified personnel.
- In case of long periods not using the appliance, turn the appliance off with the ON/OFF button and disconnect it from mains supply. Empty the appliance, clean the interior and leave the door ajar.
- For the protection of environment, please contact local Borough or Council for authorised removal.
- Wrappings contain environmentally friendly materials which can be recycled, recovered or disposed without threat to the environment.

- To prevent any pollution be careful not to damage the insulation or refrigeration tubes at the rear wall during the installation, cleaning and disposal of the appliance.
- Never let the children play with the appliance.
- Self closing door (certain models only) hinge pulls the door to the cabinet just before closing, thereby preventing the door to remain ajar. Equally it limits the door opening angle and prevents damage to adjacent elements.
- Rating plate with basic information is located in the interior of the appliance. If the sticker plate is not suitable for your language, replace it with the attached one.



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Description of the appliance

TRADITIONAL FREEZER




- 1 Control panel
- 2 Interior light
- 3 Freezing compartment
- 4 Fast freeze for small quantities of food*
- 5 Large storage compartment - BIG'N'FREEZE DRAWER*
- 6 Storage compartment
- 7 Defrost drain outlet groove
- 8 Legs
- 9 Wheels*

- Interior accessories of the appliance may vary according to the model.
- Drawers are protected against accidental extraction. To extract the drawer from the appliance, open it and lift front part upwards, then pull it out. Certain models are fitted with pull-out slide guides which facilitate opening. Pull-out guide drawers are extracted by lifting the rear end and pulling out inclined under the 45° angle. Reinsert in opposite sequence.

* Certain models only.

NO FROST FREEZER

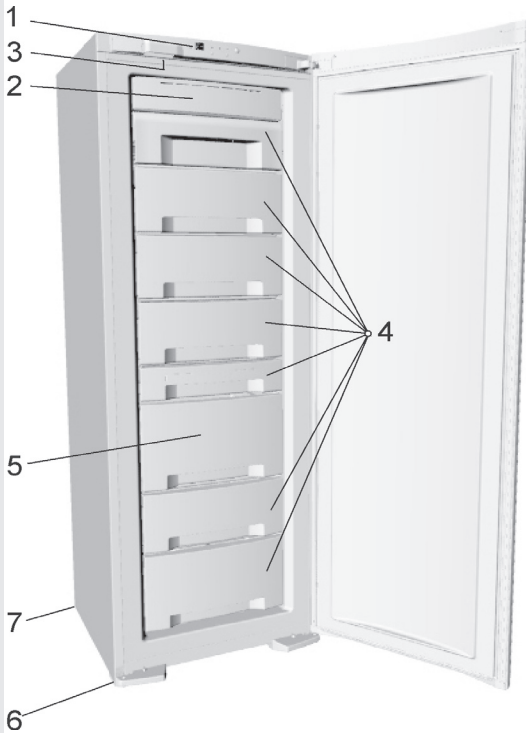

- 1 Control unit**
- 2 NO FROST freezing unit**
(cooler, fan ...)*
- 3 Interior illumination**
- 4 Freezing and storage area**
- 5 Large space - BIG'N'FREEZE**
drawer*
- 6 Leg**
- 7 Wheel***

- Interior accessories of the appliance may vary according to the model.
- Drawers are protected against accidental extraction. To extract the drawer from the appliance, open it and lift front part upwards, then pull it out. Certain models are fitted with pull-out slide guides which facilitate opening. Pull-out guide drawers are extracted by lifting the rear end and pulling out inclined under the 45° angle. Reinsert in opposite sequence.
- Fan (hid within the freezer unit) provides better distribution of temperature. It is off when the freezer door is open, or during idle compressor periods.

* Certain models only.


Installation and connection

Selecting the location

- Place the appliance in dry and well aired room. The appliance operates best at temperature ranges indicated in the chart below. See relevant class of the appliance indicated on the rating plate.


Class	Ambient temperature
SN (subnormal)	from +10°C to +32°C
N (normal)	from +16°C to +32°C
ST (subtropical)	from +18°C to +38°C
T (tropical)	from +18°C to +43°C


Positioning the appliance

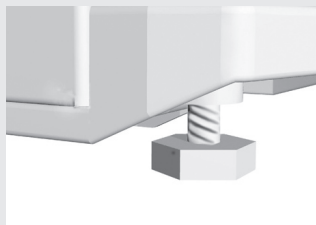

Positioning the appliance requires two people in order to avoid possible damage.

- Place the appliance firmly on a flat and solid base. The appliance is fitted with adjustable feet on the front side, used to level the appliance. Rear side of the appliance is fitted with wheels (certain models only) facilitating the positioning of the appliance at the preselected place.
- The element above the appliance must be at least 5 cm away to allow sufficient cooling of the condenser.
- Avoid exposing the appliance to direct sunlight or heat sources. If this is not possible, place insulation between the appliance and adjacent heat source.
- Bottom front corners of the appliance is fitted with handles to facilitate moving of the appliance may stand independently or adjacent to a furniture element or wall. Be sure to leave enough space for the opening of the door, to avoid damage to the appliance or injury to people.

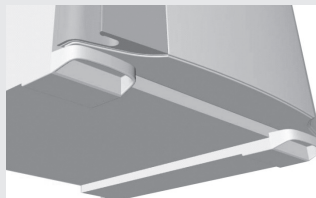

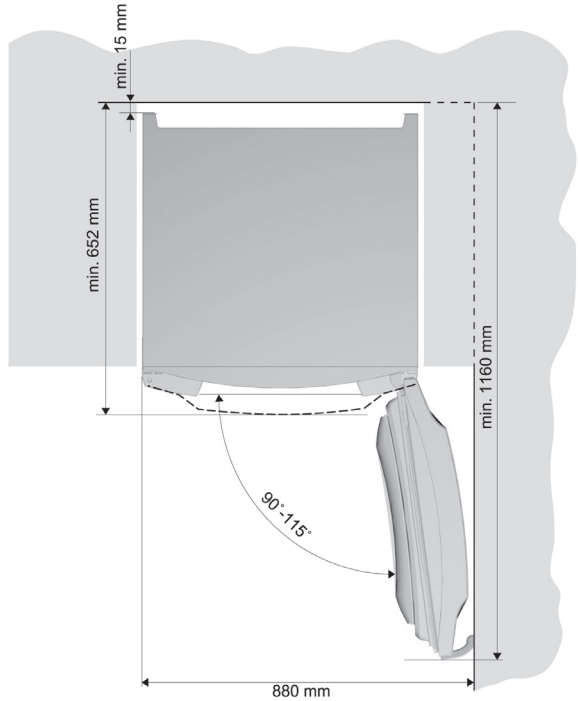

Connecting to power supply



- Use the power cord to connect the appliance to the mains power. Wall outlet must be fitted with ground terminal (safety socket). Nominal voltage and frequency are indicated on the relevant label or rating plate of the appliance.
- Mains power connection and grounding must be made in accordance to standard regulations and requirements.

The appliance is able to accommodate minor temporary voltage fluctuations, which do not exceed -10% to +6%.

Reverse door swing

Required tools; socket spanner nr. 8, screwdriver, torx 25

Caution! After unscrewing of before fixing hinges, hold the door to prevent it from falling and damaging.

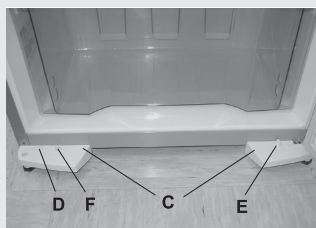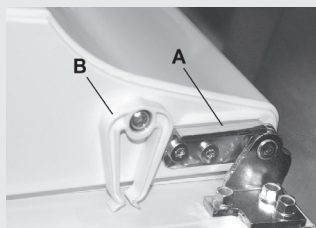

1. Remove upper hinge cover (keep it for eventual later use), together with cover on the opposite side of the upper hinge cover (on the opposite side you will insert the attached cover during the assembly), and remove the cover on the opposite side of the upper part of the door.
2. Unscrew upper hinge screws and remove the door from the bottom hinge.
3. On the bottom side of the door unscrew the swing stopper screws and remove the stopper (A). Keep this for later use. Fix the attached stopper with its bearing on the opposite side of the door.
4. Unscrew the forced door closure system (B) and fix it to the opposite side of the door (certain models only).
5. Tilt the appliance backward (max. 35°) to lean to the rear side of the cabinet. Unscrew the leg support screws (C) - left and right, and remove the leg support cover (D). Unscrew and remove, then reciprocally replace the position of end switch (E) and decorative peg (F) (for models with forced door closing system). Place this on the opposite side. Unscrew three screws fixing the bottom hinge (keep this for possible later use), and fix the attached bottom hinge on the opposite side.
6. Proceed with the assembly procedure in opposite sequence.

Note:


In appliances with the handle along the entire height of the door, the reverse door swing is not possible.

Control panel


The description refers to the appliance with all available accessories, so that it could contain certain settings our model may not have.

Control unit

MODEL WITH KNOBS

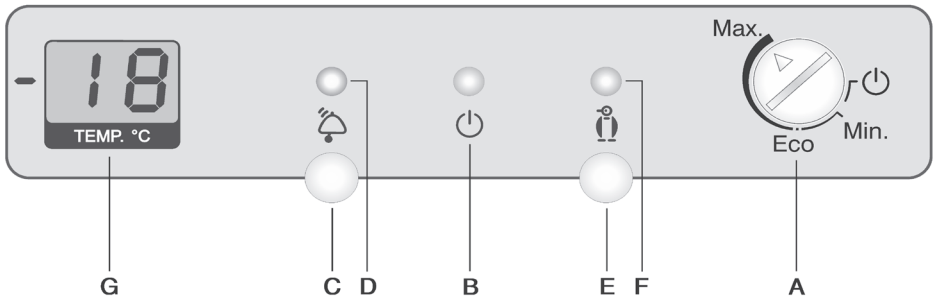

MODEL WITHOUT KNOBS

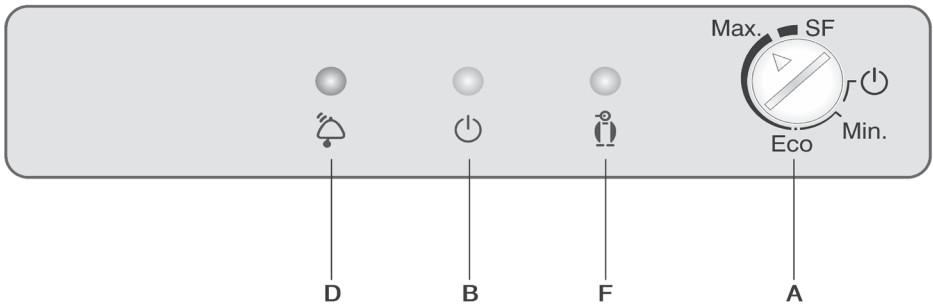

A Temperature selector and ON/OFF button

B Green LED: illuminated when the appliance is in operation

C Freezer alarm off button*

D Red LED: flashing with freezer alarm


E Fast freezing button*


F Orange LED: on during fast freezing procedure

G Digital freezer temperature display indicates actual freezer temperature inside the appliance from -16°C to -24°C*


* Certain models only.

The ON/OFF button

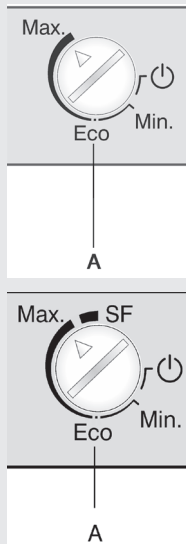

The appliance is switched on by turning the button **A** towards **Max.** (Green LED on). The appliance is switched off when the arrow on the button points to the ON/OFF mark  (the appliance, however, is still under mains power).


Setting freezer temperature

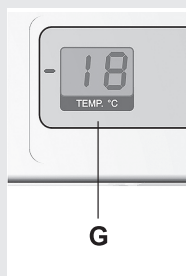

- Temperature of the appliance is set by turning the button **A** to the position between the **Min** and **Max** span.
- Recommended setting of the thermostat knob is to **Eco** position (around -18°C in appliances with digital display).
- The digital display (certain models only) flashes and indicates set temperature. When flashing stops, setting is completed and is automatically saved in memory. Please allow time to reduce down to desired temperature.

Each time the appliance is switched on for the first time, the digital display (**G**) indicates temperature of -16°C and flashes. This value remains on display until the actual temperature falls below the indicated value. Then flashing stops and the digital display indicates the **actual temperature** within the freezer.

Fast freezing

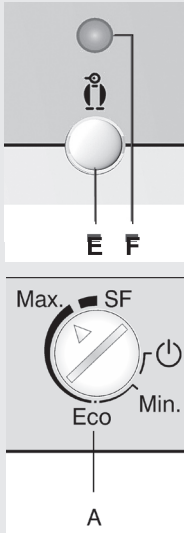


Activate intensive freezing 24 hours prior freezing fresh food. In models with knobs continuous freezing is activated by pressing the knob **E**, and in models without knobs by the button **A** (position **SF**). Orange LED is on (**F**). If the setting is not switched off manually, it will be switched off automatically after approximately 50 hours.

- The function is used with the first start of the appliance, before cleaning, and when larger quantities of fresh food are inserted in the appliance.

No button model:

- After the Intensive freezing option is switched off automatically the appliance operates at **Max.** setting.
- To repeat the Intensive freezing option turn the knob **A** from the position **SF** to the position **Eco**, then back to **SF**!

Freezer Alarm

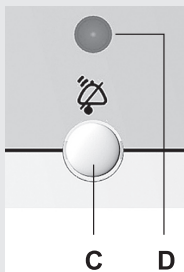

All models:

Red signal lamp (**D**) signalizes excessive raise of temperature. The lamp goes off automatically if the freezer cools down to such point that there is no danger for stored food to decay.

- After the first switch on the appliance has a 24-hour temperature alarm delay, in order to allow the freezer to reach the required temperature. This is to prevent unnecessary alarm reactions.

Model with knobs:

Models with knobs have a sound alarm (intermittent beep) in addition to the red signal lamp.

- Sound alarm is switched off by pressing the knob (**C**).
- The alarm sounds each 24 hours if the temperature within the freezer raises to such level that there is danger of food decay.

Freezing and storage of frozen food

Freezing procedure

- Activate intensive freezing 24 hours prior freezing fresh food. In models with knobs continuous freezing is activated by pressing the knob **E**, and in models without knobs by the button **A** (position **SF**). After this period insert fresh food **in the freezing compartment**. Do not let the already frozen packages touch the fresh ones.
- After 24 hours you may relocate the food **to the storage compartment**, and repeat the freezing procedure. Freezer models NO FROST allow freezing in all drawers, but not more than 7 kg in any particular drawer, and 4 kg in the bottom drawer. Optionally you can remove drawers and store food directly on the shelf.
- For freezing smaller quantities of fresh food (1-2 kg), the engagement of the fast freeze function is not required.

Important precautions for freezing of fresh food

- ⚠ **Freeze only such food which is suitable for freezing and can sustain low temperatures. Food should be of adequate quality and fresh.**
- ⚠ **Select adequate packaging for each kind of food and pack it correctly.**
- ⚠ **The packaging should be air tight and well sealed without leaking since this could cause substantial vitamin loss and dehydration.**
- ⚠ **Mark packages with following data: Type, amount and dates.**
- ⚠ **It is imperative that food is frozen as quickly as possible. We therefore recommend the size of the package not to be too large and to be cooled before loading into the freezer.**
- ⚠ **The amount of the fresh foods that can be loaded in the freezer as a single load is declared on the rating plate. If the loaded amount is too large, the quality of freezing is reduced which in turn affects the quality of frozen foods.**

Storing commercially frozen food

The storage time and recommended temperature for storing commercially frozen foods is indicated on the packaging. Always follow manufacturer's instructions for storage and use of frozen food. When shopping be careful to choose only food which is adequately packed and provided with complete data and stored in freezers where the temperature never rises above -18°C .

Do not buy packages of food with frost. This indicates that the package was thawed at least once before.

Take care that packages don't start to thaw during transport to your home. Temperature rise shortens the storage time of commercially frozen foods.

Approximate storage time of frozen foods

Food	Period
Fruit, beef	from 10 to 12 months
Vegetables, veal, poultry	from 8 to 10 months
Venison	from 6 to 8 months
Pork	from 4 to 6 months
Chopped (minced) meat	4 months
Bread, pastry, TV-dinner, fat free fish	3 months
Intestines	2 months
Smoked sausages, fat fish	1 month

Defrosting frozen food

Partially thawed or defrosted foods should be used as soon as possible. Cold air preserves the food but it does not destroy microorganisms which rapidly activate themselves after defrosting and make foods perishable.

Partial defrosting reduces the nutritional value of food, especially fruits, vegetables and readymade meals.

Making ice




Remove the cap from ice tray (certain models only) and fill it to the mark with filtered cold water or some other liquid, suitable for freezing. Close it and place it on the door shelf. One tray can be placed over the other. Ice tray can produce 8 cubes, with extra 8 made if you pour water over the top of the tray in horizontal position.


It is recommended to make ice on stock.

Ice cubes are removed from the tray by turning the tray upside down and placing it under cold running water. Shake the tray, open the cover and pour the ice out.

Defrosting the appliance


Defrosting traditional freezer

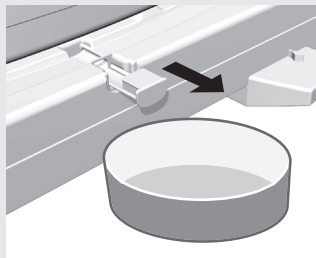

- Clean the freezer when the frost layer in the freezer reaches thickness of around 3-5 mm.
- 24 hours prior defrosting activate intensive freezing knob (see section Control of particular models - Intensive freezing), to quickly freeze freshly inserted food. The yellow light will indicate this. After that empty the freezer and take care that the packages remain frozen.
- Switch the appliance off by turning the temperature selector **A** to the mark , and pull the power cord from mains socket.
- To drain defrost water pull the funnel shaped groove at the bottom of the appliance out, and place a convenient vessel underneath to collect the defrost water.
- Never use powered appliances to defrost the freezer (hair dryer, etc.).
- Avoid using defrosting sprays, as they may cause damage to the plastic parts and may be hazardous to health.
- Clean the interior of the appliance and wipe it dry (see chapter Cleaning).
- Before reloading food into the freezer switch the appliance on prior.


Defrosting the NO FROST freezer

- Defrosting of NO FROST freezer is automatic. Periodic appearance of frost layer eventually disappears automatically.

Prior to any cleaning. Please disconnect the appliance from the mains (turn the thermostat button to the position  and pull the power cord from the mains outlet). Special antibacterial protection in top layer of inner walls prevents growth of bacteria whilst keeping the interior clean and germ free.



Please remove traces of any cleaning detergents you may have used.

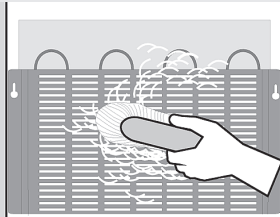- Clean the **exterior** of the appliance with water and mild liquid detergent.
- For cleaning of plastic, coated, or aluminum parts avoid using abrasive or special cleansing agents (like the stainless steel polish), otherwise you may damage the surface.
- Clean coated and aluminum surfaces using the soft cloth and alcohol based cleaning agent (like glass cleaner).
- Wash the **interior** of the appliance with liquid detergent and lukewarm water, mixed with a little vinegar.
- The **condenser** on the rear wall must always be clean and free of dust or kitchen fumes deposits, therefore clean the dust periodically with non-metallic brush or vacuum cleaner.
- Ice and/or frost deposits exceeding 3-5 mm increase energy consumption, so you need to remove them regularly (not for the NO FROST freezer). Do not use sharp pointed objects, solvents or sprays.
- After cleaning switch the appliance on and replace the contents.



Troubleshooting guide

Fault:	Cause/Remedy
The appliance does not operate after connection to the mains:	<ul style="list-style-type: none"> • Check if there is power in the socket and if the appliance is switched on.
Cooling system operates continuously without intermittent stoppages:	<ul style="list-style-type: none"> • Check air circulation for sufficient cooling of the compressor, and clean the condenser.
	<ul style="list-style-type: none"> • Ambient temperature too high.
	<ul style="list-style-type: none"> • Frequent opening of the door, door open too long.
	<ul style="list-style-type: none"> • Door not closed properly (particle between door gasket, sagged door, check gasket sealing, etc...).
	<ul style="list-style-type: none"> • Excessive quantity of fresh food inserted at once.
Ice formation within the freezer interior is a consequence of:	<ul style="list-style-type: none"> • Bad door sealing; clean or replace the gasket if dirty or damaged.
	<ul style="list-style-type: none"> • Frequent opening of the door, door open too long.
	<ul style="list-style-type: none"> • Inserting hot food in the freezer.
Red light is on:	<ul style="list-style-type: none"> • Frequent opening of the door, door open too long.
	<ul style="list-style-type: none"> • Door not closed properly (particle between door gasket, sagged door, damaged gasket, etc...).
	<ul style="list-style-type: none"> • Excessively long power failure.
	<ul style="list-style-type: none"> • Excessive quantity of fresh food inserted at once.
Difficult door opening:	<ul style="list-style-type: none"> • If you attempt to open the immediately closed door of the freezer you may experience resistance. This happens because certain quantity of cold air escapes from the appliance through the open door and is replaced by warm ambient air. Cooling of such air creates negative pressure (vacuum) and suction, which prevents easy opening of the door. This is normalized after several minutes and you can open the door with ease.

Fault:	Cause/Remedy
Bulb replacement (certain models only): 	<ul style="list-style-type: none"> • Before replacing the light bulb, disconnect the appliance from the power supply. Remove the plastic cover, replace the bulb with a new one (E 14, max. same voltage as the factory one) and fit back the cover. • Please dispose of this correctly. • Light bulb is consumption material and is not covered by the warranty.
Green LED is flashing:	<ul style="list-style-type: none"> • If the green LED is flashing, call the nearest service center.
Error code displayed (certain models only):	<ul style="list-style-type: none"> • If the character E1 appears on the digital display (certain models only), call service assistance.
Troubleshooting helpful hints:	<ul style="list-style-type: none"> • If you are not able to fix the trouble by any of the above tips, turn the thermostat button to the position , disconnect the power cord from the mains outlet, wait 10 minutes, and reconnect the appliance. Should none of the above guidelines be of positive help, please call for service assistance, quoting information given on the rating plate either within, or at rear of an appliance.

Cooling of refrigerator-freezer appliances is provided by compressor cooling system (for NO FROST freezer also fan). Operation of this system results in certain noise, the intensity of which depends upon the installation, correct use, and age of the appliance.

- **After starting the appliance**, the operation of the compressor (the refrigerant flow) may be somewhat louder. This does not mean that something is wrong with the appliance, neither has it any influence on the lifetime of the appliance. Gradually the noise is reduced and eventually subsides.
- Sometimes the appliance produces **unusual and stronger noise** which is rather unusual for the appliance. This noise is often the consequence of inadequate positioning of the appliance:
 - The appliance should be placed and leveled firmly on solid base.
 - It should not touch the wall or adjacent kitchen units standing next to it.
 - Check whether the accessories in the interior of the appliance are placed correctly in their positions; also check the bottles, tins and other vessels that might touch each other and vibrate.

THE MANUFACTURER RESERVES THE RIGHT TO ALTER THE SPECIFICATIONS WITH NO IMPACT TO THE FUNCTIONAL OPERATION OF THE APPLIANCE.

