


**WM 63141**

**Activate/Deactivate Child lock**



KEY Symbol

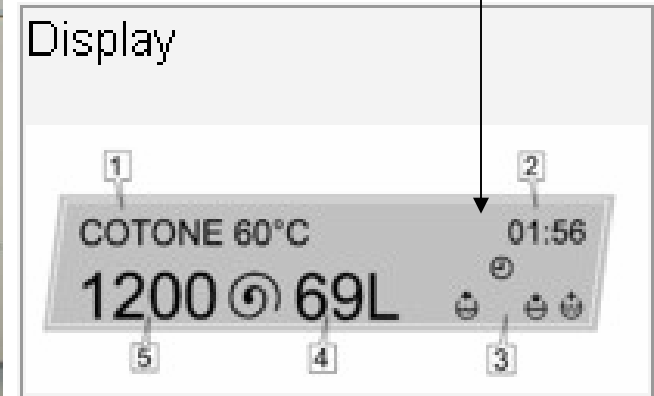


To deactivate- press down menu button (ringed red) for 4 seconds and in the top right hand side of the display screen, a key symbol appears

WITHIN 15 SECONDS- then press selector button (ringed green)

This will have deactivated the child lock. If the second button is not pressed within 15 seconds, the child lock stays on

To activate, press the menu button for 4 seconds

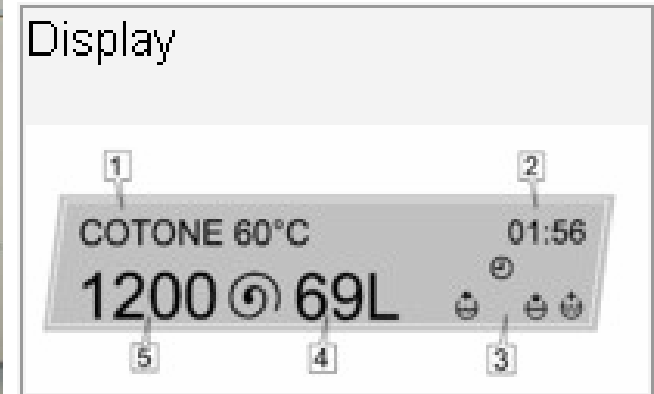

If the appliance is in operation- press down menu button (ringed red) for 4 seconds

Stop the programme by pressing start/pause button (ringed purple)

Press the menu button until the key symbol is displayed

Press selector button to disengage the function

# **WM 62121**

**Activate/Deactivate Child lock**

**Appliance without display**

# CHILD LOCK

## TO LOCK-

- Press the Quick wash and HWL button for 3 seconds

Selection of the lock being on is confirmed by a sound signal and the illuminated LED lock/end

## TO UNLOCK-

- Follow same procedure above

\*\*\*\*\*

**IF THE LOCK IS ON, IT REMAINS ACTIVE EVEN AFTER THE APPLIANCE IS SWITCHED OFF. IF YOU WISH TO SELECT A NEW WASH PROGRAMME, TO DISENGAGED THE LOCK, USE THE PROCESS ABOVE**