






INDUCTION HOB SECONDARY MENU GUIDE

MODELS COVERED IN THIS GUIDE INCLUDE SI3950B, SI3642B & SI3321B

- 1 - Automatic control lock
- 2 - Showroom
- 3 - ECO-logic.

In models with more than 2 zones:

- Press  and  together for 5 seconds.
- Display should change to show '1n' or '1S'.
(If appliance shows '1n' - the lock is off, if appliance shows '1S' - the lock is on)
- If appliance shows '1S' press minus (-) key to change to '1n'. If appliance shows '1n' then press  to move to next stage.
- Display should then show '2n' or '2S'.
(If appliance shows '1n' - the showroom mode is off, if appliance shows '1S' - the showroom mode is on)
- If appliance shows '2S' press minus (-) key to change to '2n'. if appliance shows '1n' then press  to move to next stage.
- Display should show '32' (2kW), '33' (3kW), '34' (4kW) or '3n' (max power). This can be modified by pressing the minus (-) or plus (+) keys.
- Press  to exit secondary menu.

If appliance has 2 zones or less:

Same as above, however instead of pressing  and  to access the menu, press  and .

Instead of pressing  to move to the next stage press .