

SMEG SUPER START GUIDE

ADDITIONAL FEATURES & SECONDARY MENU OF SMEG OVENS

FOR MODELS: SF109 / SFP109 / SFP125 / SFP390 / SF390 / SF485 / SC45MC / SC45M / SC45VC / MP122 / DOSP38X / S45MC / S45M / S45VC / MP322 / SFP6925 / SF6922 / SF4920 / MP422



HOW TO:

SET THE CLOCK

- When the oven is on standby position, turn the far left control knob to the right or left for 5 seconds- or until the time flashes.
- Set the hours by turning the left control knob to the right or left to go up or down.
- Once you have the correct hour repress the left control knob. Repeat this process for setting the minutes.
- Leave for 5 seconds and the time will now be saved.



SET THE MINUTE MINDER

This function activates the buzzer without stopping the cooking. Great to use as an egg timer or to alert the user to add other dishes to the oven.

- Press the left control once (twice if cooking is already in progress). The display will show 00:00 and the timer indicator flashes.
- Turn the left control to set the duration from 1 minute to 4 hours.
- After 5 seconds the indicator light stops flashes and the time starts to count down.
- A buzzer will indicate when the time has finished.

SET TIMED COOKING

This function allows the cooking to start and then end after a specific duration of time set by a user. Great for everyday cooking, so that the oven alerts the user when the cooking has finished.

- After selecting a cooking function and temperature, press the left control knob 3 times. The display will show 00:00 and the  indicator light flashes.
- Turn the left control knob to set the cooking duration from 00:00 to 13:00.
- After 5 seconds the duration is set and the  indicator will stop flashing.
- Press the right control knob to start timed cooking.
- At the end of cooking STOP flashes on the display and a buzzer will sound.

www.smeguk.com

 **smeg**
technology with style

SMEG SUPER START GUIDE





ADDITIONAL FEATURES & SECONDARY MENU OF SMEG OVENS

FOR MODELS: SF109 / SFP109 / SFP125 / SFP390 / SF390 / SC45MC / SC45M / SC45VC / MP122 / DOSP38X / S45MC / S45M / S45VC / MP322 / SFP6925 / SF6922 / SF4920 / MP422

 

 

HOW TO:

SET PROGRAMMED COOKING

This function allows the oven to be stopped automatically at an established clock time set by a user. Great for setting to come on during the day, and it will automatically turn off after cooking.






- After selecting a cooking function and temperature, press the left control knob 3 times. The display will show 00:00 and the  indicator light flashes.
- Turn the left control knob to set the cooking duration from 00:00 to 13:00.
- Press the left control a 4th time and the  indicator light flashes, turn the left control to set the clock cooking end time.
- After 5 seconds the duration is set and the  and  indicators will stop flashing.
- At the end of cooking STOP flashes on the display and a buzzer will sound.

SET THE CLOCK (FOR MODELS DOSC36X, DUSC36X & OPERA COOKERS)

- Press and hold the  button for 2 seconds. A flashing dot will be seen between 2 and 3 on the clock.
- Press the  or  button to increase or decrease the time.
- Press  or wait 5 seconds to exit the time setting mode.

 




HOW TO SET THE MINUTE MINDER

This function activates the buzzer without stopping the cooking. Great to use as an egg timer or to alert the user to add other dishes to the oven.

- Press the  button for 2 seconds. A  symbol will appear between 9 and 10 on the clock.
- Press the  or  button to increase or decrease the time. Each line represents 1 minute, if going over 1 hour a ring around the desired hour will appear. The example to the right shows 1 hour 10 minute.
- Press  or wait 5 seconds to exit the time setting mode.
- A buzzer will indicate when the time has finished.

HOW TO SET DURATION COOKING

This function allows the cooking to start and then end after a specific duration of time set by a user. Great for everyday cooking, so that the oven alerts the user when the cooking has finished.

- After selecting a cooking function and temperature, press the  button and  symbol will appear flashing on the clock between 11 and 12.
- Press the  or  button to increase or decrease the time- for every 12 minutes a new line will appear. The example to the right shows 1 hour 12 minutes.
- Wait 5 seconds to exit the time setting mode.
- A fixed  symbol will appear between 11 and 12 on the clock.
- A buzzer will indicate when the time has finished and the oven will automatically turn off.



www.smeguk.com

 smeg
technology with style







S M E G SUPER START GUIDE

ADDITIONAL FEATURES & SECONDARY MENU OF SMEG OVENS

HOW TO:


 

SET AN END COOKING TIME

This allows the user to set a cooking duration as well as an end cooking time- this can be delayed up to 12 hours from when it was set.

- After selecting the cooking function and temperature proceed as previous section in 'How to set duration cooking'.
- Once the desired cooking duration has been set press  button, then the  symbol will appear between 10 and 11.
- Press the  or  button to increase or decrease the time, each line represents 1 minute.
- Wait 5 seconds and the time will be set.
- The example to the right shows the current time as 07:06 and cooking is programmed to start at 8:06 and to finish at 9:06.
- Once the current time coincides with the cooking start time the internal segments begin to flash to show it has starting cooking.
- Once the cooking duration has ended the buzzer will sound and the oven will automatically turn off.



 

 


SET THE CLOCK (SFP378X & SF372X)





- Press and hold  for 2 seconds. A flashing dot will be seen between 2 and 3 and the time can now be set.
- Press the  or  buttons to increase or decrease the setting by one minute for each pressure until reaching the desired time.
- Press or wait 5 seconds to exit the time setting mode.



USING THE TIMER

- Press the  button, the display will show 00:00 and the  symbol will flash on the display.
- Press the  or  buttons to set the time.
- Press or wait 5 seconds to exit the time setting mode. The  symbol will appear on the display.

SET THE COOKING DURATION

- After selecting a cooking function and temperature press  button and the display will show 00:00.
- Press the  or  buttons to increase or decrease the time.
- Wait 5 seconds and the time will be set.
- The A symbol and the  symbol will appear on the display.
- After the cooking duration has ended a buzzer will sound and the user will have to manually switch off the oven.

www.smeguk.com

 **smeg**
technology with style






S M E G SUPER START GUIDE

ADDITIONAL FEATURES & SECONDARY MENU OF SMEG OVENS



 
 


HOW TO:

SET AN END COOKING TIME



 


- After selecting the cooking function and temperature proceed as previous section in 'How to set duration cooking'.
- Once the desired cooking duration has been set press  button and the sum of the current time and the cooking time will appear.
- Press the  or  button to increase or decrease the time, each line represents 1 minute.
- The current time and the A symbol will show on the display panel.
- At the end of the cooking time the buzzer will sound and the oven will automatically switch off.

SET THE CLOCK



 


(FOR MODELS: VICTORIA RANGE COOKERS/SYMPHONY RANGE COOKERS/ CONCERT RANGE COOKERS)

- Press and hold the  and  buttons at the same time for 2 seconds. A flashing dot will appear in-between the hours and minutes.
- The time can be set using the  or  buttons.
- Press  or wait 5 seconds to exit the time setting mode.
- The  symbol will appear on the display to highlight that the appliance is ready to start cooking.

THE TIMER

- Press the  button, the display will show 00:00 and the  symbol will flash on the display.
- Press the  or  buttons to set the time.
- Press or wait 5 seconds to exit the time setting mode. The  symbol will appear on the display.

SET DURATION COOKING

- After selecting a cooking function and temperature press  button and the  symbol will come up in-between 00:00 on the display.
- Press the  or  buttons to increase or decrease the time.
- Wait 5 seconds and the time will be set.
- The A symbol and the  symbol will appear on the display.
- After the cooking duration has ended a buzzer will sound and the oven will be automatically switched off.









S M E G SUPER START GUIDE

HOW TO:


SET AN END COOKING TIME


- After selecting the cooking function and temperature proceed as previous section in 'How to set duration cooking'.
- Once the desired cooking duration has been set press  button and the sum of the current time and the cooking time will appear.
- Press the  or  button to increase or decrease the time, each line represents 1 minute.
- The current time and the A and  symbols will appear on the display panel.
- At the end of the cooking time the buzzer will sound and the oven will automatically switch off.


SECONDARY MENU:

Selected models have a secondary menu that allows you to modify some of the ovens settings. These include child lock, showroom mode, Eco logic and Eco light modes.

CHILD LOCK will stop a child from accidentally switching the oven on. The appliance will lock the controls automatically after 1 minute. The oven will not heat up sufficiently to cause injury.

When this mode is active this symbol will appear on the display panel . This will become on bloc or off bloc on the menu.

SHOWROOM MODE is used for demonstrating the products in Showrooms. The elements are not heated, but the display panel can be set for cooking. When this mode is activated this symbol will appear on the display panel . This will become Off Show or On Show on the menu.

THE ECO LOGIC MODE uses less power, to reduce energy bills. This is useful if other appliances in the cooking area require more power than is available. Cooking times will be lengthened. This  logo will be highlighted in the display panel when this mode is activated. This will become High power or Low Power on the menu.

KEEP WARM MODE keeps the oven on for a period of time after the oven has finished cooking at a low temperature. This will become Off hold or On hold on the menu.

THESE MODELS HAVE A SECONDARY MENU: SF109 / SFP109 / SFP125 / SFP390 / SF390 / SC45MC / SC45M / SC45VC / MP122 / DOSP38X / S45MC / S45M / S45VC / MP322 / MP422

HOW TO ENTER THE SECONDARY MENU

- When the oven is on standby turn the far left control knob, to activate the light.
- Press and hold down the control for at least 5 seconds
- Options for the secondary menu will appear and can be changed by moving the dial to the right.
- Once the desired option is found, press in the dial to select this option. Turn the dial right or left to turn the option on or off.

www.smeguk.com

 **smeg**
technology with style