

FOR INFORMATION ONLY

REMOVING THE WOK BURNER NOZZLE

The correct tool to use for nozzle removal in the wok burner, is a 7mm ring spanner.



If you use an open ended spanner you run the risk of damaging the nozzle by slipping and rounding it off.

Once the spanner is located securely on the nozzle, move the spanner to the left, as indicated below, to loosen and remove the nozzle.

