

PRODUCT INFORMATION


RANGE - TUMBLE DRYER

MODEL - DRY72 DRY72BK

The time selector is not a timer, it does not count down to zero.
For example, if you set it for 20 mins drying time, at the end of 20 mins the dryer will stop and the red LED will illuminate and the green LED will flash and the timer will still be showing 20 mins selected. **THIS IS NOT A FAULT.**

This model is unlike similar previous products where the clockwork timer control mechanism will physically rotate and countdown from the time set by the user to zero on the dial.

The control is a selector and not a rotating countdown indicator and does not show elapsed time or time remaining.

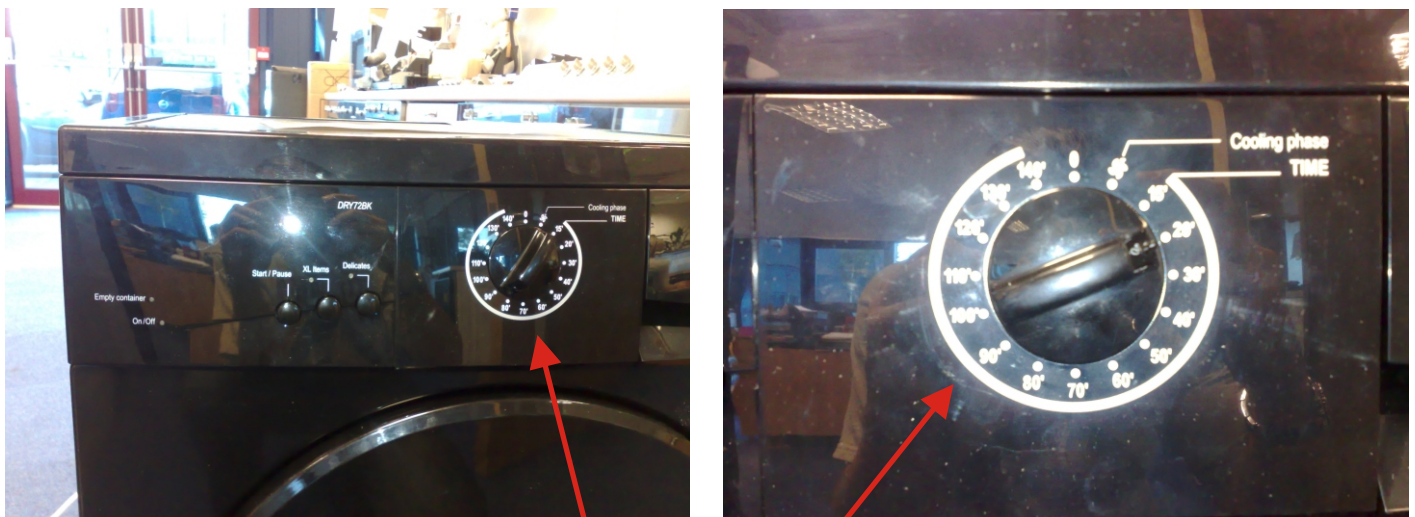

time control