


BUILDERS GUIDE – WDI12C WASHER/DRYER

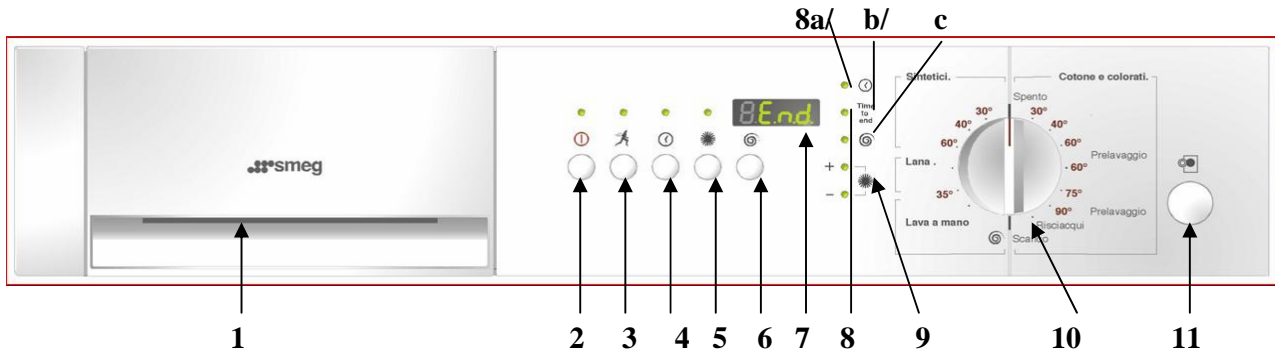

- | | | |
|--------------------------------------|-----------------------------------|----------------------|
| 1 Soap/conditioner drawer | 2 On/off button | 3 Quick wash |
| 4 Delay timer button | 5 Dryer button | 6 Spin button |
| 7 LCD | 8a Delay time shown on LED | |
| 8b Time to end shown on LED | 8c Spin speed shown on LED | |
| 9 Drying temperature selected | 10 Programme selector knob | |
| 11 Door open push button | | |

Before using your washer/dryer

- Ensure that the transit bolts have been removed
- Ensure that the water supply has been turned on
- Ensure that the outlet hose is correctly connected to the stand pipe/U bend underneath the sink

Using your washer/dryer

- Place detergent in section 2 and if required, fabric softener in section marked with a flower in the soap/conditioner drawer (1)
- Press the door open button (11)
- Sort your washing into 5Kg loads and check thoroughly for foreign objects
- Check wash labels and close coarse zips
- Choose a wash programme suitable for your wash load and turn programme selector knob (10).
- Energetic programmes (right hand side of programme dial from 12 o'clock to 6 o'clock)
- Woollens (6 o'clock to 9 o'clock)
- Delicate programmes (from 9 o'clock to 12 o'clock)
- Press spin button (6). The spin speed selected will show in the LCD screen
- Close the door firmly ensuring that none of the fabrics are caught in the door entrance
- If you do not close the door of the machine firmly an interlock will stop the machine from working
- Press the on/off button (2) to start the programme

If you want to programme the machine to automatically dry at the end of the wash cycle please see page 2 of this information sheet.

Our customer care team will assist you with product information (0870 990 9907). In the unlikely event of a fault, our service call centre can be contacted on the same telephone number just a different option.

We hope that this information will help you to use your washer/dryer for the first time without difficulty.

This document is an introductory information sheet and does not replace the instruction book provided with this machine

