

Depending on your exact model you may have either:-

- 1) 2 locks at the top and 2 screws at the bottom of the decor door.
- 2) 1 lock in each corner of the decor door.
- 3) 2 screws only at the bottom of the door.



Remove the 2 screws holding the bottom while supporting the decor door, ensuring the door does not drop.

Along the top edge of the decor door you will find the locking mechanism. You will need a decor door key, supplied when new and is also available from the online shop -

[www.smeg-service.co.uk/smegshop](http://www.smeg-service.co.uk/smegshop)

Insert the key into the slot, give it a 1/4 turn clockwise and gently pull the key.

You have now unlocked the decor door which can now be removed.



If you have only 2 screws holding the decor door remove the 2 screws holding the bottom while supporting the decor door, ensuring the door does not drop.

The door can then be slid downwards and lifted off.



Dishwasher Decor Door Key



Various Dishwasher Decor Door Fixing Kits