


**DO NOT ATTEMPT THIS PROCEDURE ON A RECENTLY USED OVEN,
WAIT UNTIL IT IS COLD TO THE TOUCH.**

SWITCH THE APPLIANCE OFF AT THE MAINS SUPPLY.

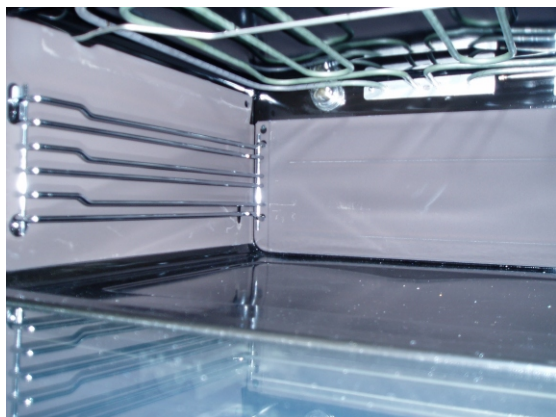

Remove all internal furniture to allow greater access to the bulb cover.

With a suitable tool carefully unscrew the bulb cover. You may require a cloth in between the tool and the bulb cover for protection.



With the bulb cover removed you will see the bulb, remove the bulb by unscrewing anti clockwise. Install the new bulb by turning the bulb clockwise, replace the bulb cover by turning it clockwise.



Oven Lamp



Oven Lamp Assembly

Parts are available from

www.smeg-service.co.uk/smegshop