



FOR INFORMATION ONLY

SALT INDICATOR AND RINSE AID INDICATOR LIGHTS

SALT INDICATOR LIGHT



When illuminated this indicates there is no salt in the appliance. If you have added salt and the light is still illuminated, with great care stir the contents of the salt chamber with the handle of a wooden spoon or similar tool. If the light still fails to extinguish please consult an engineer.

Details on how to fill your appliance with salt are included in your user manual.

User Manuals can be downloaded from here -

www.smeg-service.co.uk/support

RINSE AID INDICATOR LIGHT



When illuminated this indicates there is no rinse aid in the appliance. If you have added rinse aid and the light is still illuminated, please consult an engineer.

Details on how to fill your appliance with rinse aid are included in your user manual.

User Manuals can be downloaded from here -

www.smeg-service.co.uk/support