


CHANGING A WATER FILTER CARTRIDGE

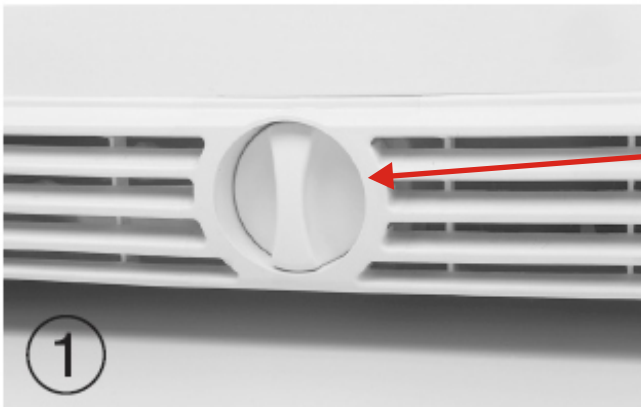

The filter is located behind the base grill below the freezer door.

Unscrew the cap in an anticlockwise direction to remove but do not discard it.

Pull the water filter out through the grill but be aware there may be water within the filter which may spill out.

Remove the cap from the end of the cartridge by sliding it off the end. Put the cap in a safe place as this will need to be placed onto the new cartridge.



Remove the new cartridge from its packaging and remove the protective end cap.



Slide the cap back onto the filter and with the cap in a vertical position, push the filter through the grille until it can go no further. Rotate the cap clockwise until it is in a horizontal position.

When the filter has been replaced, run the water dispenser for around 6 minutes to clear the system of air. As air is dispelled from the system, water may spurt from the dispenser.

Parts are available from

www.smeg-service.co.uk/smegshop